


WWW.BLINDS4UK.CO.UK

How to Fit Reminiscent Cassette Roller Blinds (Spring or sidewinder control)

FACE FIX BRACKETS (To fit the bracket to the wall or window frame)

Brackets should be positioned about 75mm in from each end. They should be positioned and fitted at least 40mm from any obstruction at the back of the blind.

Any remaining brackets should be equally spaced between these

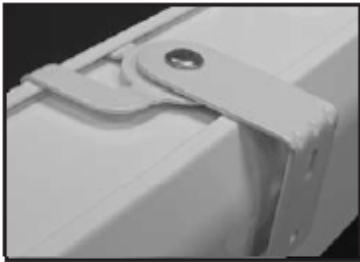

- 1) Mark the position of the brackets and face fix the brackets (2 screws) to the wall or frame ensuring swing arm is facing towards you.
- 2) Push the swing arm anti-clockwise as far as it will go.
- 3) Angle the front of the cassette & ease the front and back teeth of the bracket underneath the lip by pushing the swing arm clock wise until it locks into position.

TOP FIX BRACKETS (To fit into the lintel)

Brackets should be positioned about 75mm in from each end.


Any remaining brackets should be equally spaced between these.



- 1) Mark the position of the brackets and top fix the brackets (1 screw per bracket) to the lintel ensuring swing arm is facing towards you.
- 2) Push the swing arm anti-clockwise as far as it will go.

- 3) Angle the front of the cassette & ease the front and back teeth of the bracket underneath the lip by pushing the swing arm clock wise until it locks into position

Cassette blind with turnbuckle brackets & sidewinder chain control.

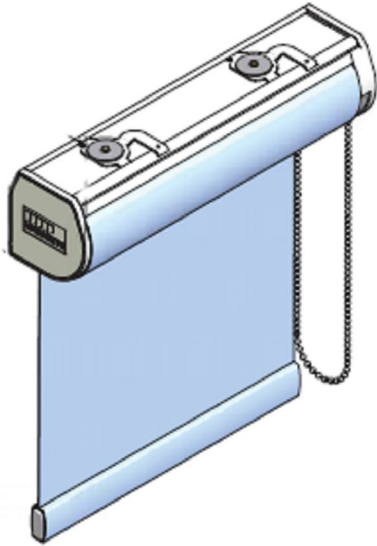

face fix turnbuckle brackets



top fix turnbuckle brackets



fixing extrusion

